




 


Nook Battery Tips

- Leave Nook in “**Airplane Mode**”
✈ symbol will appear in upper right hand corner of reading screen
- Leave Nook in “**Sleep Mode**” when not reading. Press power button once and release. Picture of author will appear when in sleep mode.
- Charge when battery indicator (upper right hand corner of reading screen) is at or below 50%   
- DO NOT plug Nook into your computer
- Plug into wall outlet (see reverse); will fully charge in less than 3.5 hours

May 2011






Nook Battery Tips

- Leave Nook in “**Airplane Mode**”
✈ symbol will appear in upper right hand corner of reading screen
- Leave Nook in “**Sleep Mode**” when not reading. Press power button once and release. Picture of author will appear when in sleep mode.
- Charge when battery indicator (upper right hand corner of reading screen) is at or below 50%   
- DO NOT plug Nook into your computer
- Plug into wall outlet (see reverse); will fully charge in less than 3.5 hours

May 2011






Nook Battery Tips

- Leave Nook in “**Airplane Mode**”
✈ symbol will appear in upper right hand corner of reading screen
- Leave Nook in “**Sleep Mode**” when not reading. Press power button once and release. Picture of author will appear when in sleep mode.
- Charge when battery indicator (upper right hand corner of reading screen) is at or below 50%   
- DO NOT plug Nook into your computer
- Plug into wall outlet (see reverse); will fully charge in less than 3.5 hours

 May 2011




Nook Battery Tips

- Leave Nook in “**Airplane Mode**”
✈ symbol will appear in upper right hand corner of reading screen
- Leave Nook in “**Sleep Mode**” when not reading. Press power button once and release. Picture of author will appear when in sleep mode.
- Charge when battery indicator (upper right hand corner of reading screen) is at or below 50%   
- DO NOT plug Nook into your computer
- Plug into wall outlet (see reverse); will fully charge in less than 3.5 hours

May 2011




Only use the supplied NOOK power adapter. Other power adapters might damage your battery and NOOK.

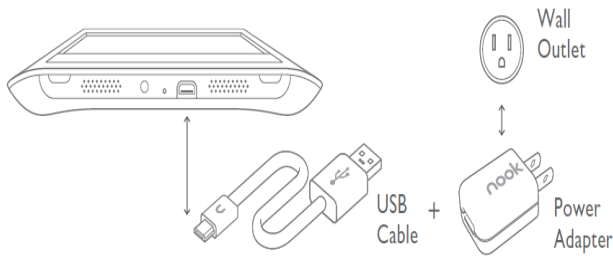

To charge your NOOK using the power adapter:

- 1 Assemble the power adapter and USB cable. Insert the large end of the USB cable into the matching receptacle on the power adapter.
- 2 Plug the NOOK end of the USB cable into your NOOK.
- 3 Plug the power adapter into a compatible electrical outlet. If your NOOK was off, it turns on. Do not turn it off again. Your NOOK charges.
- 4 When charging, the charging indicator light to the left of the USB port lights up yellow.
- 5 When your NOOK is fully charged, the charging indicator light goes out.
- 6 Unplug the power adapter from the electrical outlet and unplug the USB cable from your NOOK.


Only use the supplied NOOK power adapter. Other power adapters might damage your battery and NOOK.

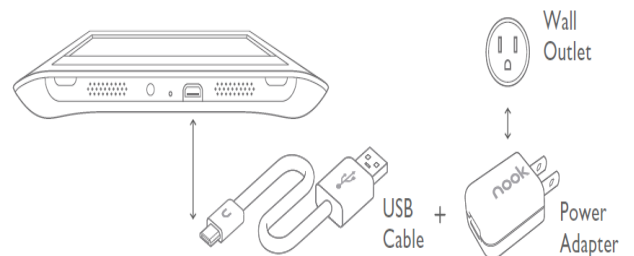

To charge your NOOK using the power adapter:

- 1 Assemble the power adapter and USB cable. Insert the large end of the USB cable into the matching receptacle on the power adapter.
- 2 Plug the NOOK end of the USB cable into your NOOK.
- 3 Plug the power adapter into a compatible electrical outlet. If your NOOK was off, it turns on. Do not turn it off again. Your NOOK charges.
- 4 When charging, the charging indicator light to the left of the USB port lights up yellow.
- 5 When your NOOK is fully charged, the charging indicator light goes out.
- 6 Unplug the power adapter from the electrical outlet and unplug the USB cable from your NOOK.


Only use the supplied NOOK power adapter. Other power adapters might damage your battery and NOOK.

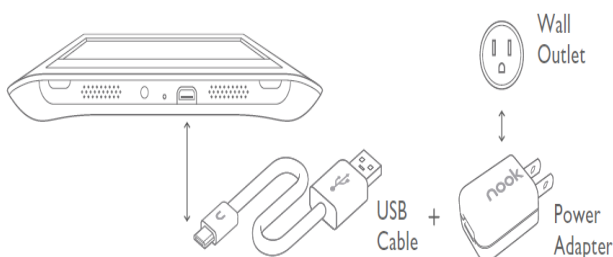

To charge your NOOK using the power adapter:

- 1 Assemble the power adapter and USB cable. Insert the large end of the USB cable into the matching receptacle on the power adapter.
- 2 Plug the NOOK end of the USB cable into your NOOK.
- 3 Plug the power adapter into a compatible electrical outlet. If your NOOK was off, it turns on. Do not turn it off again. Your NOOK charges.
- 4 When charging, the charging indicator light to the left of the USB port lights up yellow.
- 5 When your NOOK is fully charged, the charging indicator light goes out.
- 6 Unplug the power adapter from the electrical outlet and unplug the USB cable from your NOOK.

Only use the supplied NOOK power adapter. Other power adapters might damage your battery and NOOK.

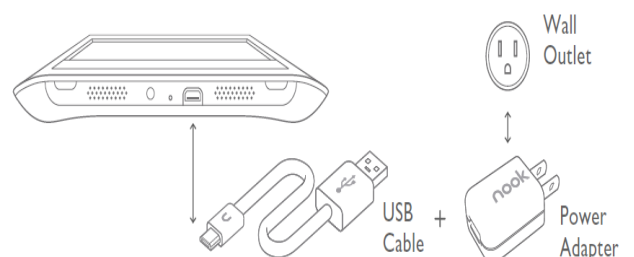

To charge your NOOK using the power adapter:

- 1 Assemble the power adapter and USB cable. Insert the large end of the USB cable into the matching receptacle on the power adapter.
- 2 Plug the NOOK end of the USB cable into your NOOK.
- 3 Plug the power adapter into a compatible electrical outlet. If your NOOK was off, it turns on. Do not turn it off again. Your NOOK charges.
- 4 When charging, the charging indicator light to the left of the USB port lights up yellow.
- 5 When your NOOK is fully charged, the charging indicator light goes out.
- 6 Unplug the power adapter from the electrical outlet and unplug the USB cable from your NOOK.